
RECUMBENT BIKE

OWNER'S MANUAL

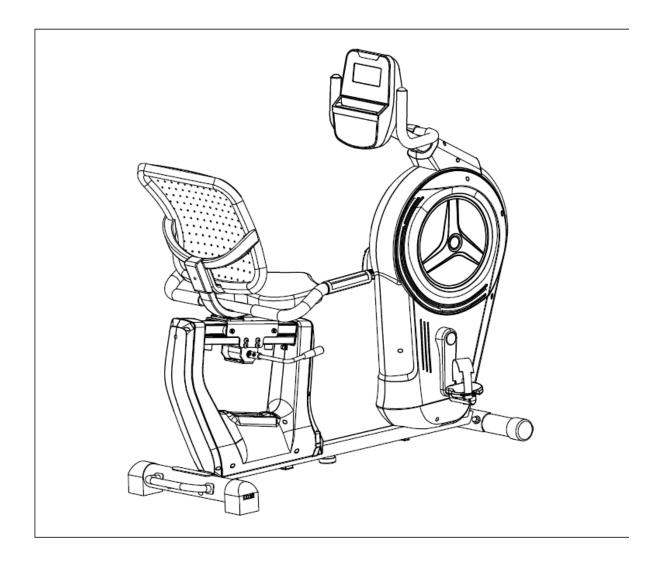

IMPORTANT!

 ${\it Please read all instructions carefully before using this product.}$

Retain this manual for future reference.

The specifications of this product may vary slightly from the illustrations and are subject to change without notice.

Before You Start

For your safety and benefit, read this manual carefully before using the machine.

Prior to assembly, remove components from the box and verify that all the listed parts were supplied. Assembly instructions are described in the following steps and illustrations.

IMPORTANT SAFETY NOTICE

CAUTION

Exercise of a strenuous nature, as is customarily done on this equipment should not be undertaken without first consulting a physician.

No specific health claims are made or implied as they relate to the equipment.

READ THE ENTIRE MANUAL BEFORE YOU ASSEMBLE OR OPERATE YOUR MACHINE. IN PARTICULAR, NOTE THE FOLLOWING SAFETY PRECAUTIONS:


- 01- Check all the screws, nuts and other connections before using the machine for the first time and ensure that the trainer is in the safe condition.
- O2- Set up the machine in a dry level place and leave it away from moisture and water.
- O3- Place a suitable base (e.g. rubber mat, wooden board etc.) beneath the machine in the area of assembly to avoid dirt and etc...
- 04- Before beginning training, remove all objects within a radius of 2 meters from the machine.
- 05- DO NOT use aggressive cleaning articles to clean the machine, only use the supplied tools or suitable tools of your own to assemble the machine or repair any parts of machine. Remove drops of sweat from the machine immediately after finishing training.
- O6- Your health can be affected by incorrect or excessive training. Consult a doctor before beginning a training program. He can define the maximum setting (Pulse. Watts. Duration of training etc) to which you may train yourself and can get precise information during training. This machine is not suitable for therapeutic purpose.
- Only do training on the machine when it is in correct working way. Use only original spare parts for any necessary repairs.
- 08- This machine can be used for only one person's training at a time.
- 09- Wear training clothes and shoes which are suitable for fitness training with the machine. Your training shoes should be appropriate for the trainer.
- 10- If you have a feeling of dizziness, sickness or other abnormal symptoms, please stop training and consult a doctor asap.
- 11- People such as children and handicapped persons should only use the machine in the presence of another person who can give aid and advice.
- 12- The power of the machine increases with increasing the speed, and the reverse.
- 13- We recommend lubricating all moving parts every 3 months.
- 14- Do not wear loose clothing to avoid entangling in any moving parts

15- Do not place fingers or any other objects into the moving parts of the bike.


WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT.

SAVE THESE INSTRUCTIONS / Maximum user's weight: 135KGS

EXPLOADED DIAGRAM

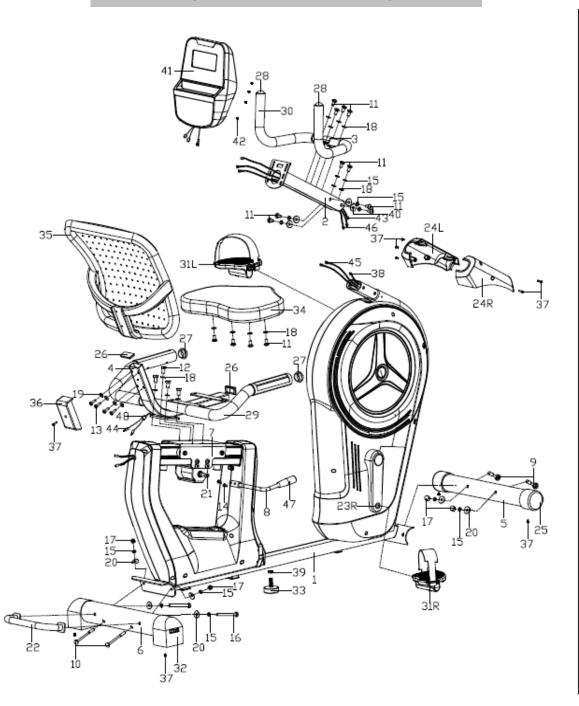



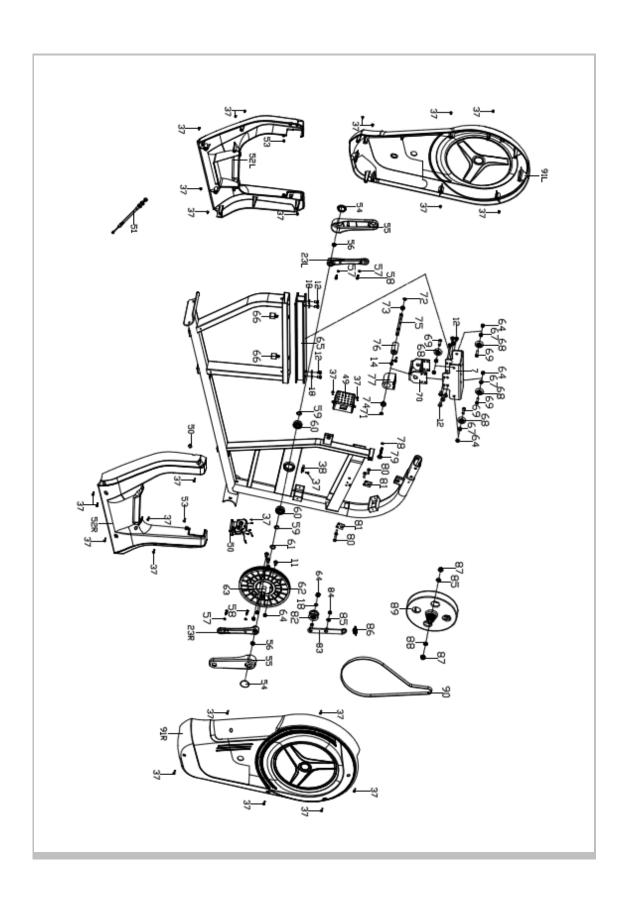

PARTS LIST

2 Handlebar post 1 27 Round cap 1 2 3 Small handle 1 28 Round cap 2 2 4 Saddle frame 1 29 Handlebar foam grip 1 2 5 Front stabilizer 1 30 Handlebar foam grip 2 2 6 Rear stabilizer 1 31L/R Pedal 1/ 7 Backrest frame seat 1 32 Rear stabilizer end cap 2 8 Adjustable handle 1 33 Adjustable leveler 1 9 Square neck pan head bolt 2 34 Saddle 1 10 Square neck pan head bolt M8X16 11 36 End cap 1 11 Inner hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 33 13 Inner hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 34 14 Inner hex pan head bolt M8X19 4 38 Sensor wire 4 <th>NO.</th> <th>Description</th> <th>QTY</th> <th>NO.</th> <th>Description</th> <th>QTY</th>	NO.	Description	QTY	NO.	Description	QTY
3 Small handle 1 28 Round cap 2 2 4 Saddle frame 1 29 Handlebar foam grip 1 2 5 Front stabilizer 1 30 Handlebar foam grip 2 2 6 Rear stabilizer 1 31L/R Pedal 1/ 7 Backrest frame seat 1 32 Rear stabilizer end cap 2 8 Adjustable handle 1 33 Adjustable leveler 1 9 Square neck pan head bolt Max	1	Mainframe	1	26	Square end cap	2
4 Saddle frame 1 29 Handlebar foam grip 1 2 5 Front stabilizer 1 30 Handlebar foam grip 2 2 6 Rear stabilizer 1 31L/R Pedal 1// 7 Backrest frame seat 1 32 Rear stabilizer end cap 2 8 Adjustable handle 1 33 Adjustable leveler 1 9 Square neck pan head bolt M8X74 2 34 Saddle 1 10 Square neck pan head bolt M8X16 11 36 End cap 1 11 Inner hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 33 13 Inner hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 33 13 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 14 Inner hex pan head bolt M8X12 1 40 Arc washer 4 15 Spring washer D8 12 40 Arc washer	2	Handlebar post	1	27	Round cap 1	2
5 Front stabilizer 1 30 Handlebar foam grip 2 2 6 Rear stabilizer 1 31L/R Pedal 1// 7 Backrest frame seat 1 32 Rear stabilizer end cap 2 8 Adjustable handle 1 33 Adjustable leveler 1 9 Square neck pan head bolt M8X74 2 34 Saddle 1 10 Square neck pan head bolt M8X74 1 36 End cap 1 11 Inner hex pan head bolt M8X16 11 36 End cap 1 12 Hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 35 13 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8X193 2 41 Console 1	3	Small handle	1	28	Round cap 2	2
6 Rear stabilizer 1 31L/R Pedal 1/ 7 Backrest frame seat 1 32 Rear stabilizer end cap 2 8 Adjustable handle 1 33 Adjustable leveler 1 9 Square neck pan head bolt M8X74 2 34 Saddle 1 10 Square neck pan head bolt M8X16 1 36 End cap 1 11 Inner hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 33 13 Inner hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 33 13 Inner hex pan head bolt M8X10 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8X193 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw	4	Saddle frame	1	29	Handlebar foam grip 1	2
7 Backrest frame seat 1 32 Rear stabilizer end cap 2 8 Adjustable handle 1 33 Adjustable leveler 1 9 Square neck pan head bolt M8X74 2 34 Saddle 1 10 Square neck pan head bolt M8X16 1 35 Backrest 1 11 Inner hex pan head bolt M8X16 11 36 End cap 1 12 Hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 33 13 Inner hex pan head bolt M8X10 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8X193 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8XD16X1.2 4 44 Pulse wire 2	5	Front stabilizer	1	30	Handlebar foam grip 2	2
8 Adjustable handle 1 33 Adjustable leveler 1 9 Square neck pan head bolt M8X74 2 34 Saddle 1 10 Square neck pan head bolt M8X14 2 35 Backrest 1 11 Inner hex pan head bolt M8X16 11 36 End cap 1 12 Hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 39 13 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 14 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8XD15 19 43 Sensor trunk wire 1 19 Flat washer D8XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1<	6	Rear stabilizer	1	31L/R	Pedal	1/1
9 Square neck pan head bolt M8X74 2 34 Saddle 1 10 Square neck pan head bolt M8X16 2 35 Backrest 1 11 Inner hex pan head bolt M8X16 11 36 End cap 1 12 Hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 39 13 Inner hex pan head bolt M8X10 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 2 <	7	Backrest frame seat	1	32	Rear stabilizer end cap	2
M8X74 M8X74 2 35 Backrest 1 10 Square neck pan head bolt M8X93 1 Backrest 1 11 Inner hex pan head bolt M8X16 11 36 End cap 1 12 Hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 39 13 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22	8	Adjustable handle	1	33	Adjustable leveler	1
M8X93 11 Inner hex pan head bolt M8X16 11 36 End cap 1 12 Hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 38 13 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8XD1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 24L/R Handlebar cover 1/1 49 Inner hex p	9	·	2	34	Saddle	1
12 Hex pan head bolt M8X12 16 37 Cross pan head self-drilling screw 39 13 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D8XD1.5 19 43 Sensor trunk wire 1 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23I/R R Crank 1/1 49 Inner hex pan head bolt M8X20 6 <td>10</td> <td>•</td> <td>2</td> <td>35</td> <td>Backrest</td> <td>1</td>	10	•	2	35	Backrest	1
13 Inner hex pan head bolt M6X40 4 38 Sensor wire 1 14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23L/R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25	11	Inner hex pan head bolt M8X16	11	36	End cap	1
14 Inner hex cylinder head M6X10 4 39 Nut M10 1 15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23L/R R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25 Front stabilizer end cap 2 50 Motor 1 51 T	12	Hex pan head bolt M8X12	16	37	Cross pan head self-drilling screw	39
15 Spring washer D8 12 40 Arc washer 4 16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23L/R R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25 Front stabilizer end cap 2 50 Motor 1 51 Tension wire 1 76 Clamping eccentric wheel 1	13	Inner hex pan head bolt M6X40	4	38	Sensor wire	1
16 Inner hex pan head bolt M8XL93 2 41 Console 1 17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23L/R R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25 Front stabilizer end cap 2 50 Motor 1 51 Tension wire 1 76 Clamping eccentric wheel 1	14	Inner hex cylinder head M6X10	4	39	Nut M10	1
17 Cap nut M8 4 42 Cross pan head screw 4 18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23L/R R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25 Front stabilizer end cap 2 50 Motor 1 51 Tension wire 1 76 Clamping eccentric wheel 1	15	Spring washer D8	12	40	Arc washer	4
18 Flat washer D8X1.5 19 43 Sensor trunk wire 1 19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23L/R R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25 Front stabilizer end cap 2 50 Motor 1 51 Tension wire 1 76 Clamping eccentric wheel 1	16	Inner hex pan head bolt M8XL93	2	41	Console	1
19 Flat washer D6XD16X1.2 4 44 Pulse wire 2 20 Curve washer D8XD25X1.5, R30 6 45 Pulse trunk wire 1 2 21 Eccentric shaft 1 46 Pulse trunk wire 2 2 22 Handle for moving 1 47 Handle grip 1 23L/R R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25 Front stabilizer end cap 2 50 Motor 1 51 Tension wire 1 76 Clamping eccentric wheel 1	17	Cap nut M8	4	42	Cross pan head screw	4
20Curve washer D8XD25X1.5, R30645Pulse trunk wire 1221Eccentric shaft146Pulse trunk wire 2222Handle for moving147Handle grip123L/R RCrank R1/148End cap124L/RHandlebar cover1/149Inner hex pan head bolt M8X20625Front stabilizer end cap250Motor151Tension wire176Clamping eccentric wheel1	18	Flat washer D8X1.5	19	43	Sensor trunk wire	1
21Eccentric shaft146Pulse trunk wire 2222Handle for moving147Handle grip123L/R R RCrank1/148End cap124L/R Handlebar cover1/149Inner hex pan head bolt M8x20625Front stabilizer end cap250Motor151Tension wire176Clamping eccentric wheel1	19	Flat washer D6XD16X1.2	4	44	Pulse wire	2
22Handle for moving147Handle grip123L/R RCrank R1/148End cap124L/RHandlebar cover1/149Inner hex pan head bolt M8x20625Front stabilizer end cap250Motor151Tension wire176Clamping eccentric wheel1	20	Curve washer D8XD25X1.5, R30	6	45	Pulse trunk wire 1	2
23L/R R Crank 1/1 48 End cap 1 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8x20 6 25 Front stabilizer end cap 2 50 Motor 1 51 Tension wire 1 76 Clamping eccentric wheel 1	21	Eccentric shaft	1	46	Pulse trunk wire 2	2
R 24L/R Handlebar cover 1/1 49 Inner hex pan head bolt M8X20 6 25 Front stabilizer end cap 2 50 Motor 1 76 Clamping eccentric wheel 1	22	Handle for moving	1	47	Handle grip	1
25 Front stabilizer end cap 2 50 Motor 1 51 Tension wire 1 76 Clamping eccentric wheel 1		Crank	1/1	48	End cap	1
51 Tension wire 1 76 Clamping eccentric wheel 1	24L/R	Handlebar cover	1/1	49	Inner hex pan head bolt M8X20	6
	25	Front stabilizer end cap	2	50	Motor	1
Total (DD) Control 4 /4 77 Hanney property heads	51	Tension wire	1	76	Clamping eccentric wheel	1
RR Opper pressure block	52L/RR RR	Cover	1/1	77	Upper pressure block	1
53 Phillips tapping screw ST4.2x10 4 78 Hex nut M6 1	53	Phillips tapping screw ST4.2x10	4	78	Hex nut M6	1
54 Crank shield cover 2 79 Chain bolt 1	54	Crank shield cover	2	79	Chain bolt	1
55 Crank shield 2 80 Allen bolt M8x20 4	55	Crank shield	2	80	Allen bolt M8x20	4

56	Flange nut M10*1.25	2	81	Setting plate	2
57	Flat washer D5*D16*1.2	4	82	Idler	1
58	Phillips tapping screw ST4.2x12	4	83	Idler link	1
59	Shaft circlip D17	2	84	Nut M10	1
60	Bearing 6203RS	2	85	Arc washer D10*2	2
61	Wave washer D17	1	86	Spring	1
62	Belt pulley	1	87	Flange nut M10*1	2
63	Axis	1	88	Outer hex nut M10X1	1
64	Nylon nut M8	8	89	Inertial wheel	1
65	Aluminum alloy guide rail	1	90	Belt	1
66	Cushion	2	91L/R	Cover piece	1/1
67	Spacer	4	92	Small belt wheel	1
68	Wheel	4	93	Battery box	1
69	Inner hex round head M8X30	4	94	Battery	1
70	Fixed seat frame	1	95	Battery box bottom guard	1
	Shaft circlip D12	2	96	Phillips tapping screw	2
71					
72					
73					
74					
75					
	Shaft circlip D10	1	97	Power generator	1
72					
72					
73					
74					
75					
	Large alloy sleeve	1	98	Fixed sleeve	1
73					
72					
73					
74					
75					
	Small alloy sleeve	1	00	Innor magnetic suchice cover	1
74	Small alloy sieeve		99	Inner magnetic cushion cover	1
74					
72					
73					
74					

75					
	Eccentric shaft	1	100	Inner hex screw M5X4	2
75					
72					
73					
74					
75					
			101	Circuit board combination	1

NOTE:

Most of the listed assembly hardware has been packaged separately, but some hardware items have been preinstalled in the identified assembly parts. In these instances, simply remove and reinstall the hardware as assembly is required.

Please reference the individual assembly steps and make note of all preinstalled hardware.


Prior to assembly of this product, remove all components from the package and verify all the listed parts are supplied. Once certain, begin with the first assembly step.

ASSEMBLY INSTRUCTIONS


Step 1

Fix the front stabilizer (5) to the mainframe (1) with cap nut (17), spring washer (15), curve washer (20) and square neck pan head bolt (9).


Lock the rear stabilizer (6) to the mainframe (1)with square neck pan head bolt(10), curve washer(20), spring washer(15) and cap nut(17).

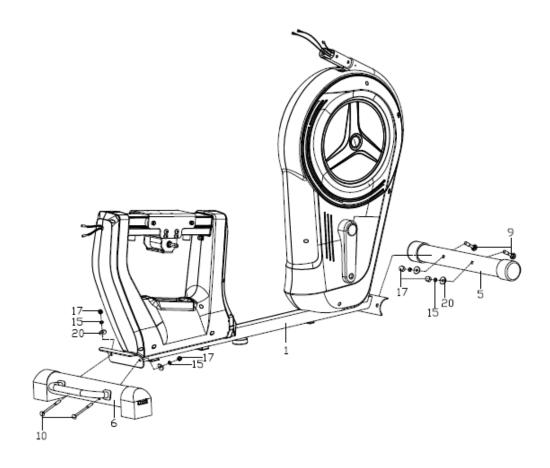


- 1. First, connect sensor wire (38), pulse trunk wire 1 (45) with sensor trunk wire (43) and pulse trunk wire 2 (46).
- 2. And then fix the handlebar post (2) to the main frame (1) with bolt (49), spring washer (15), flat washer(18) arc washer (40). Fix the handlebar cover (24L/R) to the mainframe (1) with cross pan head self-drilling screw (37).

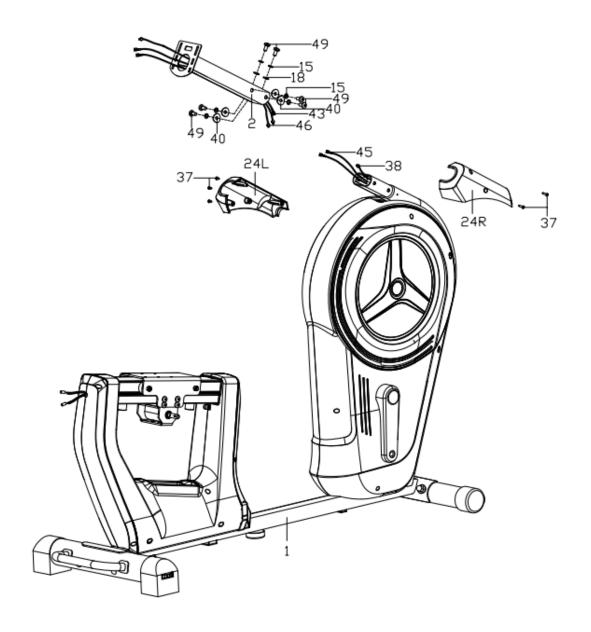


- 1. Fix the handle (3) to the handlebar post (2) with inner hex pan head bolt (11) and flat washer (18).
- 2.Connect the pedal (31L/R) to the crank (23L/R). Note: please turn the pedal in the direction as showed in the picture. Make sure the pedal (31L/R) is tight when exercised.

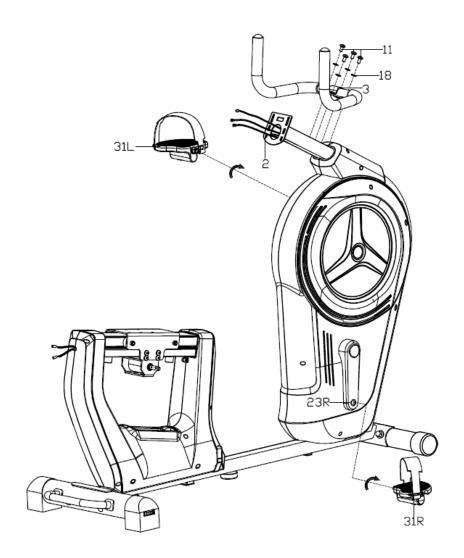


- 1. Connect the sensor wire (44) with pulse trunk wire 1 (45), and then fasten the saddle frame (4) to the Backrest frame seat (7) with flat washer (18) and cross pan head bolt (12).
- 2. Fix the adjustable handle (8) to the eccentric shaft (21) with inner hex cylinder head bolt (14).

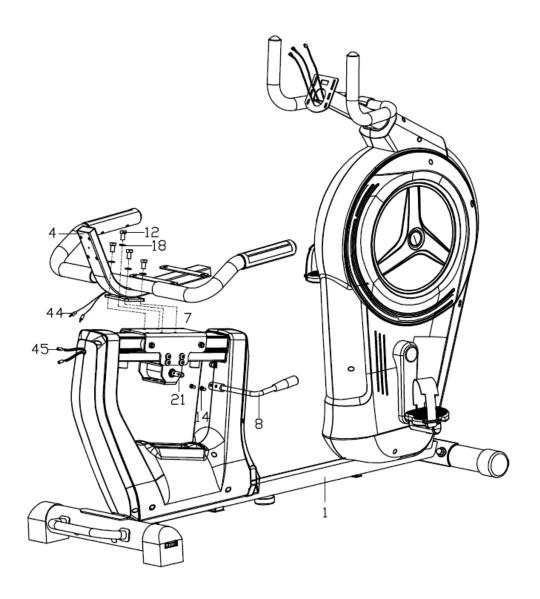

- 1. Fix the saddle (34) to the saddle frame (4) with flat washer (18) and inner hex pan head bolt (11).
- 2. Fix the backrest (35) to the saddle frame (4) with inner hex pan head bolt (13) and flat washer (19).
- 3. Press the end cover (36) to the saddle frame (4) and fasten it by cross pan head screw (37).

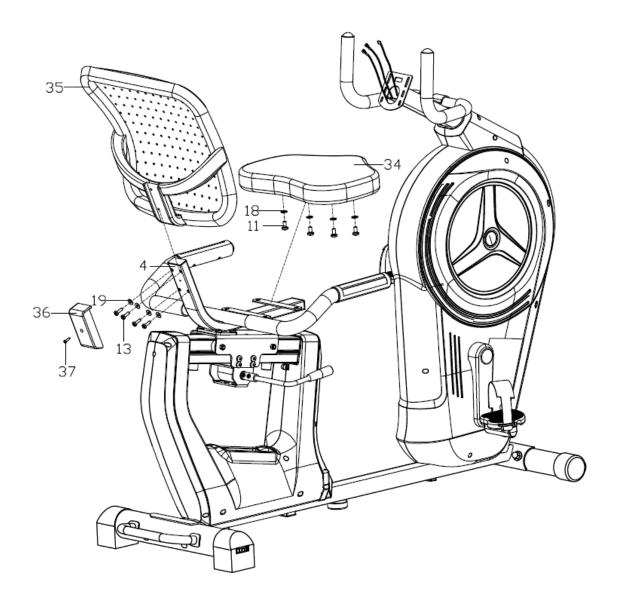

Connect the sensor trunk wire (43), pulse trunk wire 2(46) with the wire of the console (41). Fix the console (41) to the handlebar post (2) with cross pan head screw (42).

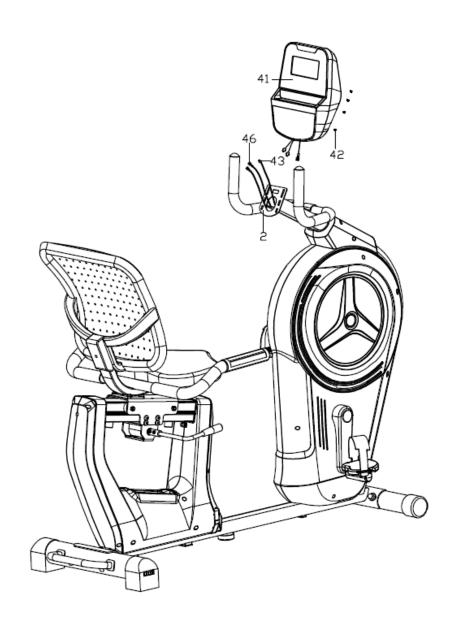

WARM-UP and COOL-DOWN

A successful exercise program consists of a warm-up, aerobic exercise, and a cool-down. Do the entire program at least two and preferably three times a week, resting for a day between workouts. After several months, you can increase your workouts to four or five times per week.

WARM-UP


The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength-training or aerobic

exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.

STRETCHING

Stretching while your muscles are warm after a proper warm-up and again after your strength

or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. **DO NOT BOUNCE**.

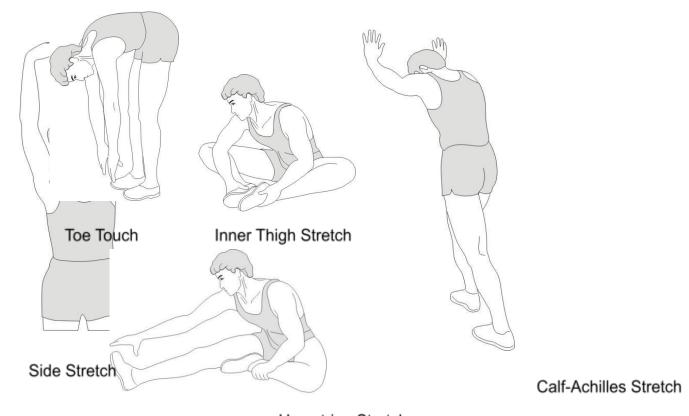

Hamstring Stretch

Remember always to check with your physician before starting any exercise program.

COOL-DOWN

The purpose of cooling down is to return the body to its normal or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart.